


Installation - Single Pendant


1

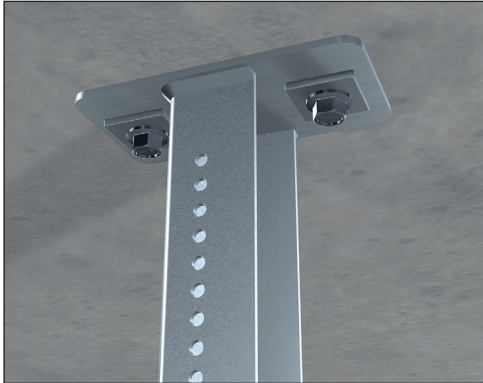

To install the pendant, mark out the hole centre locations, using the top plate dimensions (page 2). Drill the fixing holes to the required depth and diameter*. Position the single pendant over the drilled holes and anchor into place, if necessary use a square washer underneath the fixing.


* Fixing type, diameter and embedment depth subject to required loading combination, seek advice from Gripple's Technical Services.

2

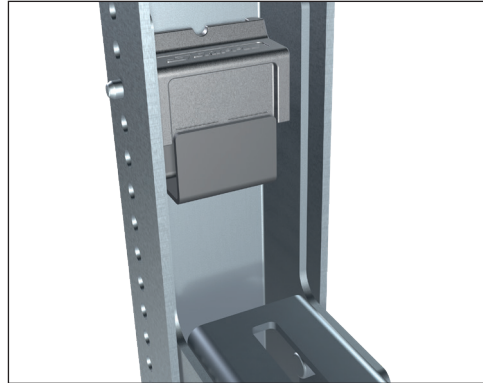

To install the bracket, support the bracket's weight and press the cartridge's button to retract the fixing pins. Hold the cartridge button whilst locating the bracket into the pendant's channel. Release the cartridge button to allow the cartridge's pins to locate the pendant's holes (ensuring that the pin has passed all the way through the hole and the locked line is visible).

3

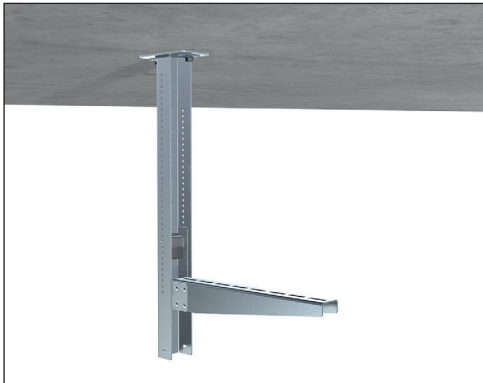

To adjust the bracket's height, support the bracket's weight, press and hold the cartridge button to retract the fixing pins whilst adjusting the bracket to the correct height. Release the pins and allow them to locate the hole, locking them at the correct height. Ensure the pins have passed all the way through the hole and the witness line is fully visible.

4



Repeat steps 1-3 to install additional brackets as necessary.

Installation - Back-to-Back Pendant

1



Repeat steps 1-3 above for the installation of Back-to-Back pendants. When installing multiple brackets at different heights, ensure a 187.5mm gap is left between horizontal supports.

Installation Guidance:

- Bracket arm is only to be installed with the slots facing upwards.
- System is not to be installed as a pre-built assembly. Installation steps to be followed as above.